 
 
 
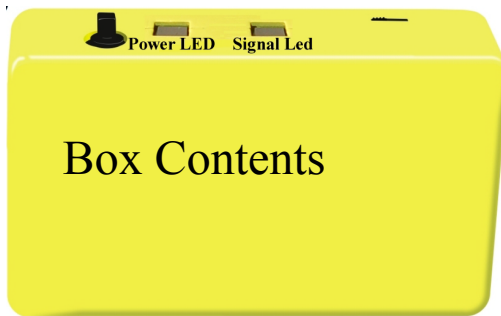 



GiPSi Quick Start



GiPSi + Carrying case
2 Chargers-Wall/Lighter
Audio Cable
USB to mini USB cable
Ear Bud
2 Velcro Straps
1 Double Sided Velcro Strip
Manual

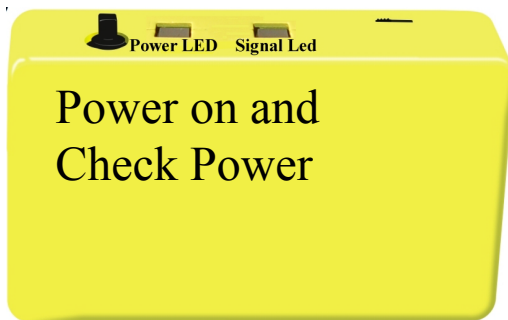

 Slide Switch toward Joy Stick,
wait 30 seconds
Power Led Green, GiPSi is
Ready to USE-Go to Page 2

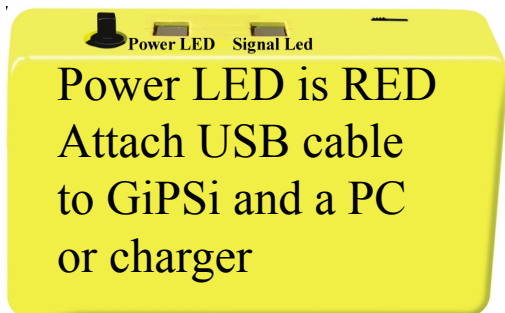

15 minute charge will run for
one hour. 5 hours for full charge
Note: Power Led is always
Green during charging.

Questions
Call 1-800-346-5186

or

Email: support@gipsinavigation.com

For further detail on any command please see Command Schematic and the User Manual